
COTTON CANDY MAKER

INSTRUCTION MANUAL



MODEL: CCM255

INDOOR HOUSEHOLD USE ONLY

Please save and read this instruction manual carefully before use.

INTRODUCTION

Each unit has been manufactured to ensure safety, reliability, and ease to use. Before use, please read these instructions carefully and keep the manual for further reference.

IMPORTANT SAFEGUARDS

When using your cotton candy maker, basic precautions should always be paid attention to, including the followings:

1. Read all instructions before operating this appliance
2. DO NOT TOUCH the hot surface. Use handles or knobs.
3. To protect from electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when this appliance is used by or near children
5. Unplug the appliance from outlet when not in use and before removing parts for cleaning
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send it back to the company as stated in this booklet in the warranty
7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
8. DO NOT use outdoors.
9. DO NOT let the cord hang over the edge of table or counter
10. DO NOT place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be employed when moving this appliance
12. DO NOT use the appliance for usage that it does not intend to.
13. DO NOT leave any unit unattended while in use or when plugged in to an outlet
14. Check inside the heating element compartment for foreign objects before switching to ON position
15. The heating element in the center can get hot. **Avoid contact until cool.**
16. A short power supply cord is provided to reduce the risk of entangling or tripping-over by a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.

18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.

19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug intends to fit into a polarized only one way.

20. Keep hands away from the machine when it is in the ON position and is spinning

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS:

Appliance Specifications :

220V-240V
50HZ
450W-525W

Important Precautions to Remember:

- A. NEVER immerse in water
- B. NEVER use near water
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit
- E. NEVER leave any unit unattended while in use.
- F. NEVER place anything other than the intended sugar in the extractor assembly head
- G. Unplug the unit from outlet when not in use and when cleaning
- H. DO NOT operate this appliance with a damaged cord or plug or in the event that the appliance ever malfunctions.
- I. DO NOT put in dishwasher
- J. Keep out of reach of children

INTRODUCTION

The whole family will enjoy the **COTTON CANDY MAKER**. Please take care of your machine by following these instructions and precautions

You can use a variety of flavored sugars with your **COTTON CANDY MAKER**

HERE'S A TIP-you can use regular household granulated sugar in your COTTON CANDY MAKER". To add a little flavor and color, mix a pinch of your favorite pre-sweetened Kool-Aid to the sugar. Imagine the variety of flavors you can make and the fun you'll have!

The COTTON CANDY MAKER" is designed for kitchen use but can be used anywhere such as:

- ✓ Family Room
- ✓ Dorm Rooms
 - ✓ Office
 - ✓ Club House
- ✓ Anywhere people gathered to have fun

And more.....



Figure A



Figure B

Removing the Extractor Head Assembly



Figure C

Extractor Head-showing groove that fits over stem



Figure D

Metal tab on unit fitted with plastic tab on bowl to Lock and Unlock



Figure E

Breaks down to cart body, bowl and extractor head

A little background on cotton candy

It was a little tough to trace the actual history of this fluffy carnival and circus treat...there were a few conflicting stories. So I'll provide you with what I discovered and you can choose the story you like best.

The earliest I could trace COTTON CANDY back to 1897. Two Tennessee candy makers, William Morrison and John C. Wharton from Nashville, invented the first electric machine that allowed crystallized sugar to be poured onto a heated spinning plate then forced it through tiny holes thus to create , as they called, fairy floss. They took their discovery to the St. Louis State Fair in 1904. At the fair, they sold the Fairy Floss in chipped-wood boxes for 25 cents each -they sold 68,655 boxes.

The city of new Orleans claims that Josef Delarose Lascaux, a dentist, invented cotton candy and the cotton candy machine.

The last interesting story is that cotton candy first appeared at the Ringling Bros. Circus in 1990 and Thomas Patton received a patent on the cotton candy machine in 1990

Cotton candy was originally called Fairy Floss (this ties into the Morrison/Wharton story). The British call it candy floss and here in America, we started calling it cotton candy in the 1920s.

If you or anyone you know can provide information on the history of cotton candy we'd love to hear from you.

INTRODUCTION

Now you can enjoy delicious cotton candy....

- ✓ **Watching TV or a movie at home**
 - ✓ **For Birthday Parties**
 - ✓ **Kids sleep-overs**
 - ✓ **After school**
 - ✓ **Barbecues**
- And more...

The **COTTON CANDY MAKER** is easy to use. Just follow these simple instructions

USING YOUR COTTON CANDY MAKER

Your **CANDY MAKER** is already fully assembled. Follow the cleaning instructions to wash the appliance in warm water, and to rinse and dry thoroughly(**Figure A**).

After cleaning and thoroughly drying the bowl, return to base making sure it is **LOCKED** into position. Align the metal tabs on the base unit with the plastic lugs on the bowl counterclockwise to **LOCK** make sure it is secured and locked into position. To remove, turn clockwise to **UNLOCK**(**Figure D**)

Return the extractor head assembly making sure that the grooves are properly aligned to fit over the pegs on the stem.(**Figure B& C**)

Now you are ready to enjoy tasty, fluffy cotton candy from your **COTTON CANDY MAKER**

First, find a stable surface near an electrical outlet before starting. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord)

1. Plug in the unit at the OFF position
2. Turn the unit to ON position and allow it to run for at least 5 minutes. This will allow it to warm up. Then switch to OFF.
3. Measure level tablespoon of sugar with the measuring spoon supplied with your **COTTON CANDY MAKER**. Pour sugar into center receptacle (**Figure F**). Switch to ON position.(**figure G**)
4. Your **COTTON CANDY MAKER** will spin the sugar into a flossy sweet treat that you collect on the paper cone by spinning the cone as it circles the bowl...just like at the carnival!

5. When you can visually see the cotton candy web, begin to collect the cotton candy on the cone by holding the cone vertically. Rotate the cone with your fingers while you circle the bowl. Once cotton candy has collected on the cone then hold the cone in a horizontal position over the extractor head while still rotating the cone with your fingers. Continue turning the cone with your fingers while the cone is in the horizontal position and moving from side to side to make sure you are collecting all the cotton candy. **(Figure H)**

6. Turn the unit OFF when all the sugar has been dispensed. Once the extractor head has come to a complete stop, you can pour another measure of sugar in the extractor head and begin again. The cotton candy should be flowing more quickly as the unit has been sufficiently warmed up.

NOTES:

For optimum results- Be sure to turn unit ON and allow it to run for at least 5 minutes before starting. This allows the unit to properly warm up before beginning to actually spin the cotton candy. Only add sugar to the extractor head when it has come to complete stop. Never use ingredients other than pure granulated sugar. This will cause clogging. DO NOT overfill the sugar receptacle.

Used following these simple instructions, your **COTTON CANDY MAKER** will be fun for kids of all ages, young or old, bringing a carnival atmosphere to any occasion.

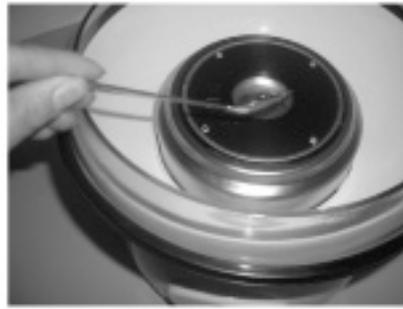


Figure F



Figure G



Figure H

CLEANING

1. Make sure the unit is unplugged and has had time to cool down before cleaning
2. After cooling, remove the extractor head assembly by pulling it straight up. UNLOCK bowl by turning clockwise and remove.(**Figure B & C & D**) wash both in warm water, rinse and dry
3. Use a slightly damp, non-abrasive sponger or towel to wipe clean the outside of the unit; wipe with a non-abrasive towel to dry

The **COTTON CANDY MAKER** breaks down to The base, bowl, and extractor head assembly for easy cleaning.

(**Figure E**)

NOTE: Cotton candy is made by heated sugar. This turns sugar into a liquid form, then the sugar liquid is forced out of tiny holes in the extractor head by centrifugal force as the extractor head spins. As the liquid sugar hits the air, it returns into a solid fluffy material that adheres to a paper cone.

It is very important that the unit be cleaned properly after every use. If not, the holes will get clogged and sugar will not be able to sift through the tiny holes properly.

RETURNS & WARRANTY

Should your unit not work or is damaged when you firstly take it out of the box, please return the unit immediately to the place of purchase.

This appliance is not intended for use by persons(including children)with insufficient physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our potion. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A

product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and other expressed warranties.